


CCP-6200 Hand Programming Guide

1. Key definition:

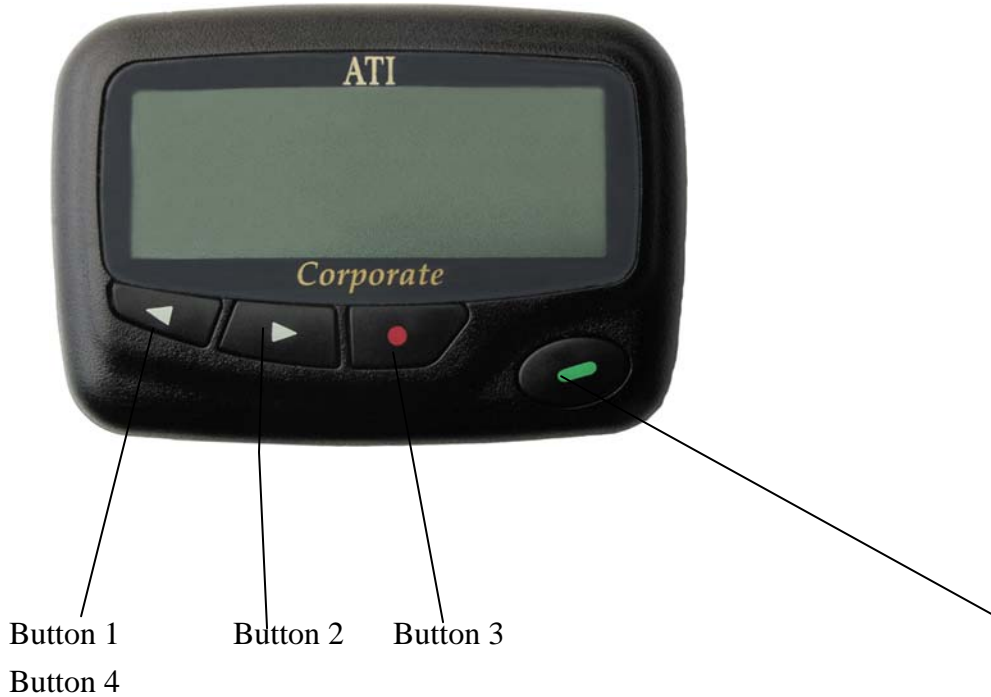

Key 1: Move's the cursor to the previous position.
Key 2: Move's the cursor to the next position.
Key 3: Confirms your selection and goes to the next screen.
Key 4: Selection key or to increase the value of the selected item

2. Direct programming procedure:

a. Remove the AAA battery from the unit.
b. Press and hold key 3 (red key) and insert the battery.
"PASSWORD" is displayed on the LCD.
c. Default password for the unit is 8000,
d. Press key 2 four times and you will enter the hand programming procedure.

3. Menu Structure

ADDR PASS	FREQ
LOAD OPTI	CODE
a. ADDR:	
Cap 1: ON 1234561	
Tone: T A N N	
Alert: T T U C	
Hint: WHICH CAP	
Cap (1- 4): can be turned On or Off	
Enter the capcode between the 0000000 - 2097151	
Tone: From left to right are the standard POCSAG Tones A,B,C,D.	
T: tone only.	
N: numeric message.	
A: alphanumeric message.	
X: no use	
Alert:	
T: TONE	
M: MUTE	
V: VIBRATE	
C: COMPOUND	
U: USER SELECT	
b. PASS: change password.	
c. FREQ:	
FREQ	X PLL
459.1500	0 8108
X: Is the ninth overtone, always set to 0 (it means the pager will calculate automatically) unless a special RF board or a special frequency is used.	
PLL: Select 8108 or 5170 (8108 series PLL :include 5166, 8107 , 8108)	
d. LOAD: Loads the factory default values into EEPROM.	
e. OPTI: (including BPS selection)	
Press key 1 or key 2, to select one of the 13 programming items:	
Any item selected will be high-lighted. Press key 4 change the value.	
Press the enter key to save the data and return to the main menu.	
Note:	
Item SQ_LK: press key 4 for increase value, press key 3 for decrease value.	