

## Feature

- ULTRA COMPACT SIZE
- 10 ALERTS, SILENT (VIBRATION), BEEP
- DISPLAY TIME, DATE AND DAY OF THE WEEK
- DISPLAY NUMBERS OF UNREAD MESSAGES
- 16 MESSAGE MEMORY
- LOCK UP TO 10 MESSAGES
- DETETE INDIVIDUAL OR ERASE ALL MESSAGES
- MESSAGE TIME STAMPING
- DUPLICATE MESSAGE INDICATOR
- 3 ALARM SETTING
- LOW BATTERY INDICATOR
- SERVICE AREA INDICATOR
- BACKLIGHT

PRESS SHIFT KEY TO MOVE CURSOR, PRESS FUNCTION KEY TO ADJUST DATA, PRESS READ KEY TO RETURN TO STAND-BY MODE

### AUTO ON/OFF SETTING

PRESS FUNCTION KEY UNTIL THE SCREEN DISPLAYS SET AUTO Y  
PRESS SHIFT KEY, THE SCREEN WILL THEN DISPLAY AS BELOW

00-00:00  
SU

ON-00:00-AUTO ON TIME  
OFF-00:00-AUTO OFF TIME


PRESS SHIFT KEY TO MOVE CURSOR, PRESS FUNCTION KEY TO CHANGE DATA, PRESS READ KEY TO RETURN TO STAND-BY MODE

NOTE: THIS FEATURE WILL TURN YOUR PAGER ON AND OFF ACCORDING TO THE

Them THAT IS SET, MESSAGES WILL NOT BE RECEIVED WHILE THIS FEATURE IS IN USE.

### PAGER OFF SETTING

## OUTLOOKING

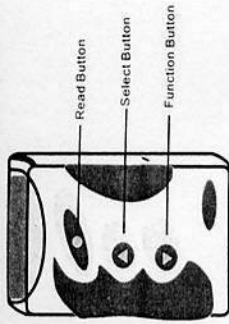

## PAGER SYMBOLS

- ☐ NUMBERS OF MESSAGES STORED
- ☑ UNREAD MESSAGE INDICATOR
- ☐ REPEAT MESSAGE INDICATOR
- ☐ LOW BATTERY INDICATOR
- ☐ SERVICE AREA INDICATOR
- ☐ LOCKED MESSAGE
- ☐ ALARM CLOCK
- ☐ AUTO ON/OFF
- ☐ STANDARD BEEP
- ☐ VIBRATOR

PRESS FUNCTION KEY UNTIL THE SCREEN DISPLAYS PAGE OFF, PRESS SHIFT KEY TO TURN PAGER OFF, PRESS READ BUTTON TO TURN PAGER BACK ON

### SET TIME

PRESS FUNCTION KEY UNTIL THE SCREEN DISPLAYS SET TIME, PRESS SHIFT KEY THE SCREEN WILL DISPLAY AS BELOW

05:59 12-04  
SU

05 - HOUR  
59 - MINUTES  
12 - DAY OF MONTH  
04 - MONTH  
SU - WEEKDAY

### 12/24 HOURS DISPLAY SETTING

PRESS SHIFT KEY UNDER SET TIME SCREEN UNTIL THE SCREEN DISPLAYS

24 HOURS  
SU

PRESS FUNCTION BUTTON TO SELECT 24 HOURS OR 12 HOURS DISPLAY SETTING.

## STAND-BY MODE

03:25 01-01  
SU

STANDBY MODE IS THE HOME SCREEN OF THE PAGER, IT DISPLAYS THE TIME, DATE AND DAY OF THE WEEK

### SET ALERT

FROM STAND-BY MODE, PRESS FUNCTION KEY THE SCREEN WILL THEN DISPLAY AS BELOW

SE: ALER: ?  
Y

PRESS SHIFT KEY TO ENTER SET ALERT MODE, PRESS FUNCTION KEY SELECT ALERT TYPE, PRESS READ BUTTON TO RETURN TO STAND BY MODE

### SET ALERT TYPE

FROM STAND-BY MODE, PRESS FUNCTION KEY THE SCREEN WILL THEN DISPLAY AS BELOW

SE: ALAR: ?  
Y

PRESS FUNCTION BUTTON AGAIN, THE SCREEN WILL THEN DISPLAY AS BELOW

Radio 02 ?  
Y

PRESS FUNCTION BUTTON TO SELECT ALERT TYPE YOU PREFER, PRESS READ BUTTON TO CONFIRM SETTING & RETURN TO STAND-BY MODE

### SET ALARM

PRESS FUNCTION KEY TWO TIMES, THE SCREEN WILL THE DISPLAY AS BELOW

SE: ALAR: ?  
Y

PRESS FUNCTION KEY TWO TIMES, THE SCREEN WILL THE DISPLAY AS BELOW

1:00 00:00  
Y

1:1 SET OF ALARM CLOCK

ON/--:ON:ENABLE ALARM CLOCK  
--:DISABLE ALARM CLOCK

00:00 - HOUR & MINUTES SETTING

## REMINDER

1. PLEASE CHANGE THE BATTERY RIGHT AWAY WHEN LOW BATTERY ICON IS DISPLAYED, OR YOU MAY MISS MESSAGES

2. DO NOT OPEN THE HOUSING WITHOUT ALLOWANCE

PRESS READ BUTTON TO CONFIRM SETTING & RETURN TO STAND-BY MODE

### READ MESSAGE

PRESS ANY KEY TO STOP ALERT, PRESS READ KEY TO READ MESSAGE, PRESS READ KEY TO VIEW THE NEXT SCREEN

### LOCK/UNLOCK DELETE INDIVIDUAL MESSAGE

1. PRESS READ KEY TO SELECT THE MESSAGE YOU WANT TO LOCK, UNLOCK OR DELETE

2. PRESS FUNCTION KEY TO LOCK, UNLOCK OR DELETE MESSAGE

3. PRESS READ KEY TO CONFIRM YOUR SELECTION

### BACKLIGHT

TO TURN ON OR THE BACKLIGHT, PRESS SHIFT KEY THE BACK LIGHT WILL AUTOMATICALLY TURN ON/OFF.

### DETEETE ALL MESSAGE

PRESS FUNCTION KEY UNTIL THE SCREEN DISPLAY CLEAR ALL, THEN PRESS SHIFT KEY TO DELETE ALL THE UNLOCKED MESSAGES