

## 2007 RAVEN ALPHA + HAND PROGRAMMING GUIDE

- FUNCTION KEY – FAR LEFT BUTTON (RED)
- SHIFT KEY – MIDDLE BUTTON (YELLOW)
- READ KEY – FAR RIGHT BUTTON (GREEN)

**\*\*\*Before entering into the hand programming you must first change the date to AUG 15 03\*\*\*\***

1. Turn the pager off. Then hold down the function key and the READ KEY. Do not release the FUNCTION or READ KEY until you see a screen that displays password and frequency. Enter 7513 for the password. Press the SHIFT KEY to change the number and the READ KEY to move the cursor.
2. Set your frequency to correspond with your transmitter frequency.
3. The next setting will be the capcodes or addresses. If you only have one capcode then enter that in address 1 and leave 2-6 set to 0000000.
4. Baud Rate: Set the baud rate to correspond with the speed in which transmitter is sending the message.
5. Polarity: 0 is a normal setting and 1 is to invert your message.